

Wollensak 11

STEREO VIEWER


HOW TO ASSEMBLE VIEWER



Remove the screw located on the bottom of the Viewer. A coin, such as a quarter, is most convenient for this.



Carefully remove the Cover as shown in the illustration above.

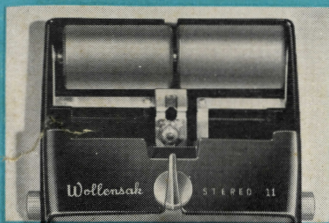


Installing batteries — Use two size "D" batteries. Place them in the battery compartment according to the diagram in the Viewer showing proper battery terminal direction. Light bulb replacement—Use No. 14 standard flash-light bulbs.



Installing Transformer Unit Insert Terminal Bar between battery contacts. Place grommet inside Viewer and run wire through hole in the back of Viewer. (Use on 110-120 Volt A.C. only).

operating instructions

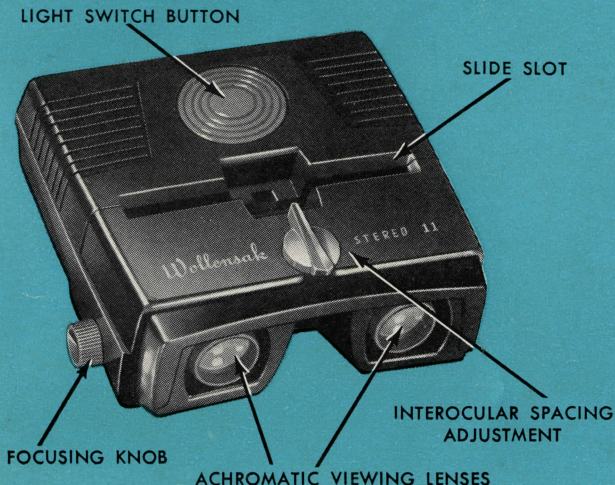

HOW TO VIEW SLIDES

1. Hold the Viewer firmly and press the Light Switch Button.
2. Turn the Interocular Spacing Adjustment to the right or left until the Viewer lens spacing match your eye spacing.
3. Bring the image into sharp focus by turning either the right or left Focusing Knob.

WOLLENSAK OPTICAL COMPANY

320 EAST 21st STREET

CHICAGO 16, ILLINOIS